

VELA



Datasheet

INDEX

Type and output overview.....	2
Description.....	3
Illustration and dimensions	4
Installation	5
Accessories	5

TYPE

Length mm	Height	Colour	Article Number
106 mm	1420 mm	Chrome	345621420106
257 mm	1420 mm	Chrome	345621420257
332 mm	1420 mm	Chrome	345621420332
106 mm	1420 mm	Black	345631420106
257 mm	1420 mm	Black	345631420257
332 mm	1420 mm	Black	345631420332
257 mm	1420 mm	Polished brass (PVD)	345641420257
257 mm	1420 mm	White	345651420257


DESCRIPTION

The Hudevad Vela is a beautiful heated towel rail with oval, vertical tubes and with 2 hooks on each tube which makes the heated towel rail very useful even in tight and small spaces. All the tubes are rounded/oval for a more harmonious and softer feel and make the Vela design stand out. The Hudevad Vela is a hydronic heated towel rail and can therefore be connected to your central heating or district heating system.

Material	Steel tubes
Included	4 brackets/distance pieces.
Test pressure	6.5 bar
Max. operating pressure	8 bar
Max. operating temperature	90°C
Output	N/A The Heated towel rail is not meant to be the sole heat source of the room and do not contribute to room heating, but are used exclusively to dry towels or textiles.
Height	1.420 mm
Length	106, 257, 332 mm
Depth	75-90 mm
Connections	All tapings 1/2" standard
Colour	Chrome, black, polished brass and white.
Installation	Wall mounted. Wall mounted brackets, air vent, blind plug, screws and rawl plugs are included. Please note that valve set and thermostat should be ordered separately.
Warranty	2 years as long as the Hudevad installation instructions have been followed, the warranty conditions have been met and the radiator is installed correctly.
Option	Valve set - either manual or with room thermostat. Should be ordered separately.


TAPPING OVERVIEW

 Drawing 4.1

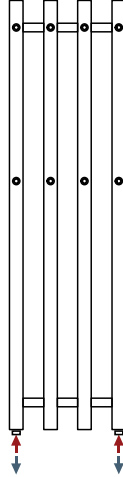

ILLUSTRATION

 Drawing 4.2

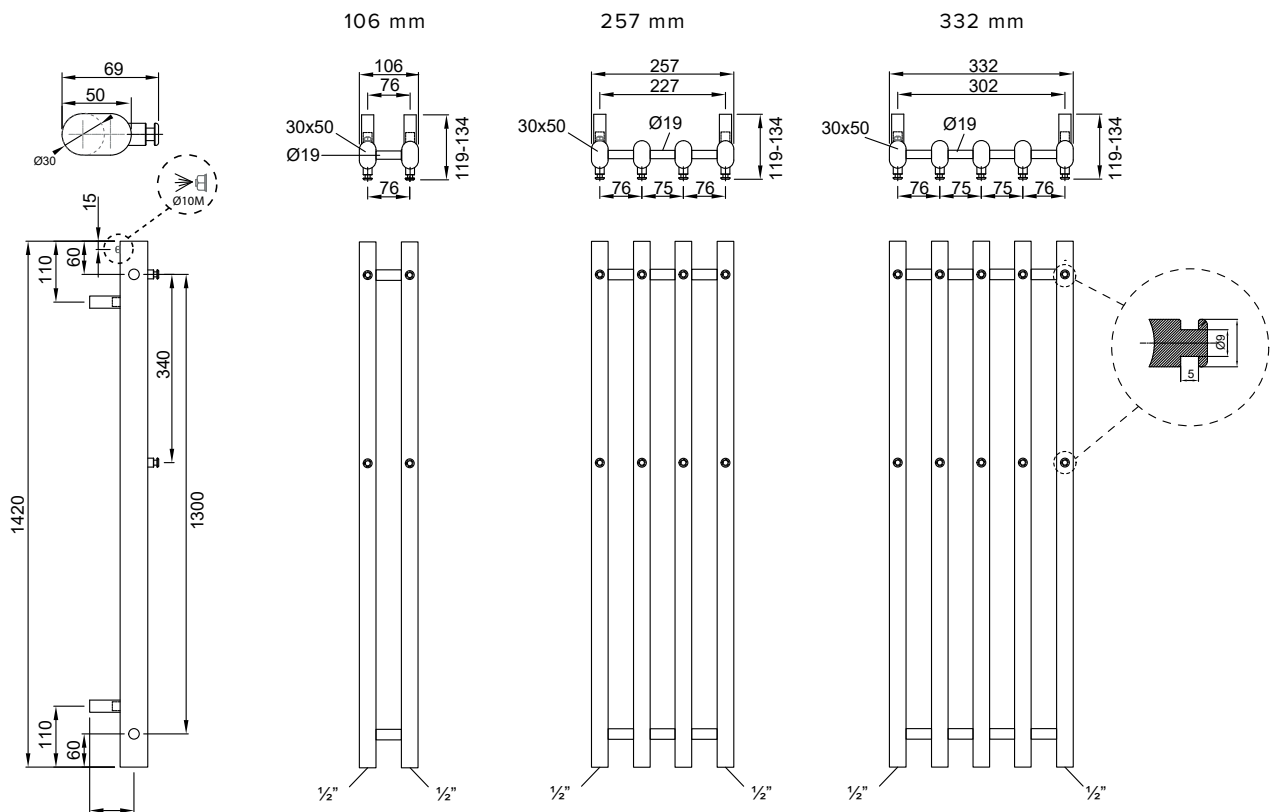


HUDEVAD
RADIATOR DESIGN

INSTALLATION

Drawing 5.1

1.

 Measure the 4 brackets on the back of the heated towel rail and mark the positions of the brackets on the wall.

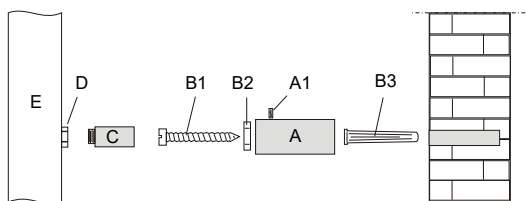

2.

Screw bracket part C into D. Repeat for all brackets.

 
3.

Fasten the bracket part (A) to the wall using washer B2 and a suitable screw B1 and wall plug B3.

Supplied screws and plugs may not be suitable for your wall! Repeat for all brackets.

4.

Lift the heated towel rail in place by letting C slide into A. Adjust the desired distance to the wall. Tighten A1 to secure, that the brackets are properly fastened.

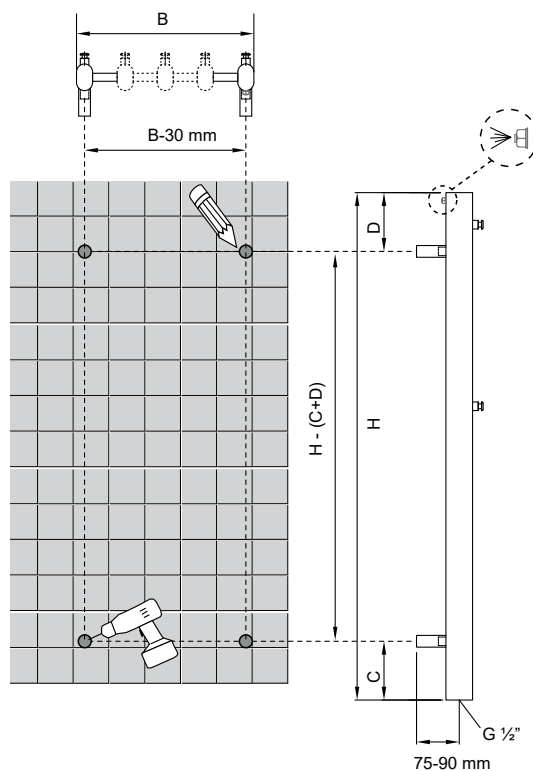

ACCESSORIES

CORNER VALVE SET M



Manual adjustment of temperature
 HKV7000C - Chrome
 HKV7000M - Brushed steel
 HKV7000S - Black
 HKV7000H - White
 HKV7000G - Brass

CORNER VALVE SET R



Temperature adjustment with thermostat **RIGHT** (Flow right)
 HKV7300C - Chrome
 HKV7300M - Brushed steel
 HKV7300S - Black
 HKV7300H - White
 HKV7200G - Brass

Temperature adjustment with thermostat **LEFT** (Flow Left)
 HKV7350C - Chrome
 HKV7350M - Brushed steel
 HKV7350S - Black
 HKV7350H - White
 HKV7250G - Brass

CROSS VALVE SET M



Manual adjustment of temperature
 HKV3500C - Chrome